

TEAC[®]

5 DISC CAROUSEL DISC CHANGER



**CD - CD-R
CD-R-W Playback
Programmable
Shuffle Play
Multi-Repeat
Functions
Remote Control**

**Rack Mounting
Rack Shelf P4035B**

General Information

- ❑ **CD - CD-R - CD-RW Playback Capability**
- ❑ **Drawer Type Carousel
5 Disc Front Load**
- ❑ **32 Track Selection Random
Multi-Disc Programming**
- ❑ **Multifunction Remote Control**
- ❑ **Intro Check Play with
Track Calendar Display**
- ❑ **Multi-Repeat Functions:**
 - Single Track Repeat**
 - Single Disc Repeat**
 - Programmed Tracks Repeat**
 - All Loaded Discs Repeat**
 - Shuffle Play**
 - All Loaded Discs Shuffle Repeat**
- ❑ **Disc Reload Capability
While 1 Disc is Playing**
- ❑ **Headphone Jack**
- ❑ **High Luminosity Digital
Fluorescent Display**
- ❑ **Rack Mounting with Optional
Rack Mounting Shelf P4035B**
- ❑ **Environmental Music Systems**
- ❑ **Background Music Systems**
- ❑ **Foreground Music Systems**

Specifications

Channels:	2 Channel Stereo
Frequency Response:	20 - 20,000 Hz ± 1 db
Signal to Noise Ratio:	96 db (1 KHz)
Dynamic Range:	90 db
Wow and Flutter:	Unmeasurable
T. H. D.:	<0.02% at 1 KHz
Channel Separation:	> than 85 db
Laser Pickup:	Laser High Resolution
Digital Filter:	1 bit, Dual Converter
Converters:	Linear 16 bit Dual Digital/Analog
Random Programming:	32 Selection Random Memory
Repeat Functions:	Single Track Repeat, Single Disc Repeat, Programmed Tracks Repeat, All Loaded Discs Repeat, Shuffle Play, All Loaded Discs Shuffle Repeat
Output Level:	2.0 Volt RMS
Headphones Output:	1 mWatt at 8 ohms
Power Requirement:	120 V 60 Hz
Power Consumption:	12 Watt
Dimensions:	17 1/8" W., 5" H., 15" D 435 x 126 x 381 mm
Finish:	Matte Black
Net Weight:	11.5 Lb (5.2 Kg)
Terminations:	RCA Standard Jacks
Optional Accesories	
Rack Mounting:	Mod. P4035B Rack Shelf (3U)


PPDD5691

PPDD5691

REV 1.0


Form NT 219

Seventy years of innovation through technology . . . 1931-2001

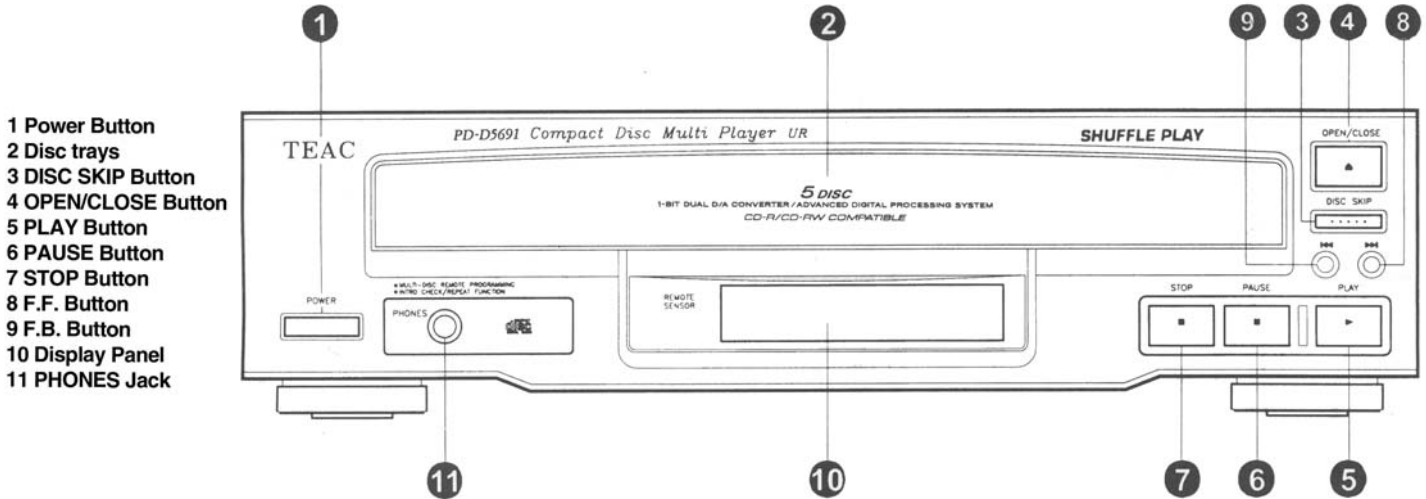


- 1 Power Button
- 2 Disc trays
- 3 DISC SKIP Button
- 4 OPEN/CLOSE Button
- 5 PLAY Button
- 6 PAUSE Button
- 7 STOP Button
- 8 F.F. Button
- 9 F.B. Button
- 10 Display Panel
- 11 PHONES Jack

Front Panel Controls

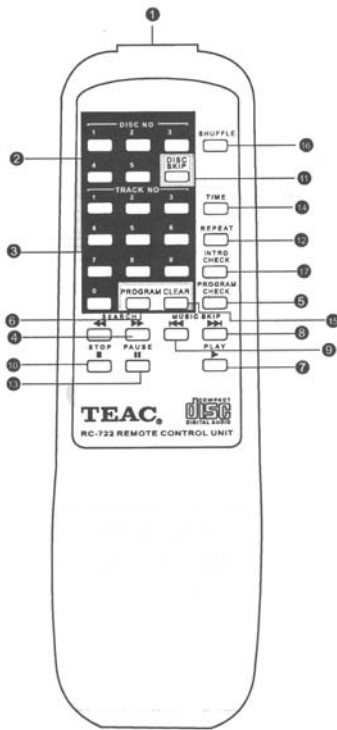


- ① Infrared Transmitter Window
- ② DISC NO. Button
- ③ TRACK NO. Button
- ④ SHUFFLE Button
- ⑤ PROGRAM CHECK Button
- ⑥ PROGRAM Button
- ⑦ PLAY Button
- ⑧ MUSIC SKIP (F.F.) Button
- ⑨ MUSIC SKIP (F.B.) Button
- ⑩ STOP Button
- ⑪ DISC SKIP Button
- ⑫ REPEAT Button
- ⑬ PAUSE Button
- ⑭ TIME Button
- ⑮ CLEAR Button
- ⑯ SHUFFLE Button
- ⑰ INTRO CHECK Button

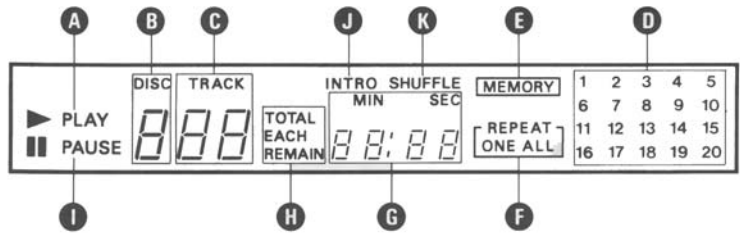

- A PLAY Indicator
- B DISC NUMBER Display
- C TRACK NUMBER Display
- D Music calendar
- E MEMORY Indicator
- F ONE REPEAT/ALL REPEAT Indicators
- G TIME Display
- H TOTAL/EACH REMAIN Indicators
- I PAUSE Indicator
- J INTRO Indicator
- K SHUFFLE Indicator

Remote Control RC 722

Digital Display

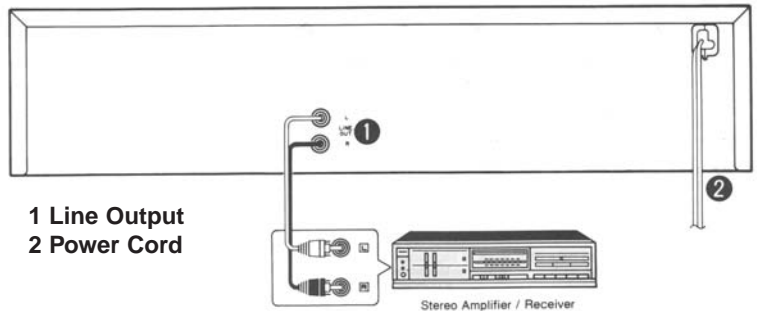

- 1 Line Output
- 2 Power Cord

Rear Panel View

AUTHORIZED DISTRIBUTOR



since 1931

PASO SOUND PRODUCTS, INC.
 4750F GOER DRIVE
 CHARLESTON, SOUTH CAROLINA 29406-6511 USA
 Phone: 843 308 9005 - Fax: 843 308 0904
 EMAIL: info@pasosound.com - URL: www.pasosound.com