

TEAC®

HIGH QUALITY CD PLAYER Reads CDR - CDRW - MP3



**HIGH QUALITY
CD PLAYER
Programmable
Shuffle Play
Music Calendar
Rack Mountable**

**Rack Mounting
PRM1260 Kit**

General Information

- High Grade CD Player with Remote Control
- 20 Track Selection Random Memory Programming
- 1-bit Dual D/A Converter
- MP3 Folder Display
- Intro Check Play with Track Calendar Display
- Multi-Repeat Functions:
 - Single Track Repeat
 - All Tracks Repeat
 - Programmed Tracks Repeat
 - Shuffle Play
 - A/B Repeat
 - Continuous Shuffle Repeat
- Time Display Button (Total/Elapsed/Remaining)
- Quick Track Search
- Headphone Jack with Level Control
- High Luminosity Digital Fluorescent Display
- Infrared Remote Supplied
- Rack Mounting with Optional 2U Rack Shelf P4035/2B
- Plays 3" and 5" CDR - CDRW - MP3
- Environmental Music Systems
- Background Music Systems
- Foreground Music Systems

Specifications

Channels:	2 Channel Stereo
Frequency Response:	20 - 20,000 Hz ± 2 db
Signal to Noise Ratio:	90 db (1 KHz)
Dynamic Range:	90 db
Wow and Flutter:	Unmeasurable
T. H. D.:	<0.03% at 1 KHz
Channel Separation:	> than 80 db
Laser Pickup:	Laser High Resolution
Digital Filter:	8-Times oversampling
Converters:	Linear 16 bit Dual
Random Programming:	Digital/Analog
Repeat Functions:	20 Selection Random Memory Single Track Repeat, Single Disc Repeat, Programmed Tracks Repeat, Shuffle Play, Shuffle Repeat
Output Level:	1.0 Volt RMS
Headphones Output:	1 mWatt at 8 ohm
Headphones Control:	Output Level Control
Power Requirement:	120 V 60 Hz
Power Consumption:	12 Watts
Dimensions:	17 1/8" W., 4" H., 11.5" D 435 x 104 x 290 mm
Finish:	Matte Black
Net Weight:	9.1 Lb (4.2 Kg)
Terminations:	RCA Standard Jacks
Remote Control:	Infrared, Model RC 1044 Supplied


Optional Accessories

Rack Mounting:	Paso Mod PRM1260 Rack Kit (2U)
-----------------------	--------------------------------

PCDP1260

RV 1.5

 FORM NT 248

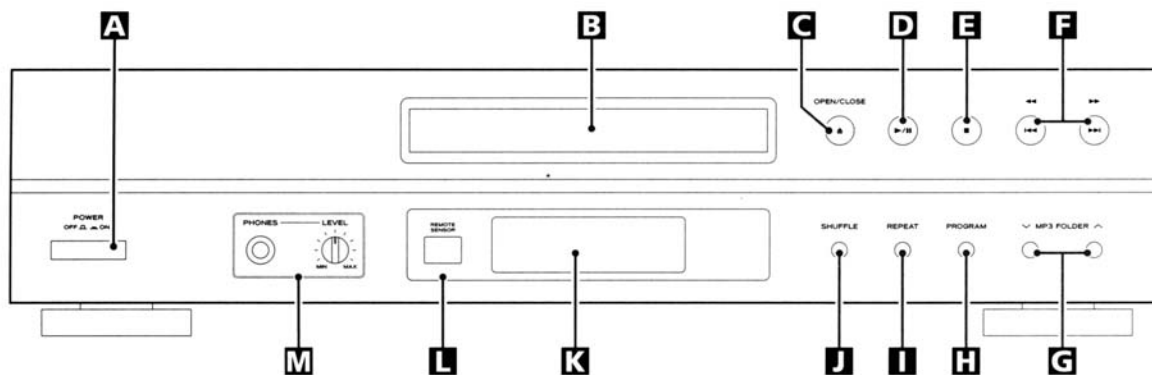

Front Panel Controls

A POWER

Press this switch to turn the unit on or off.

The equipment draws a nominal amount of power from the AC outlet even with its POWER switch in the OFF position.

B Disc tray

C OPEN/CLOSE

Use this button to open and close the disc tray.

D PLAY/PAUSE (▶/⏸)

Use this button to start or pause playback of CD/MP3.

E STOP (■)

Use this button to stop playback of CD/MP3.

F SKIP (◀◀/▶▶)/SEARCH (◀◀/▶▶)

Use these buttons to skip tracks. Hold down these buttons to search for a part of a track.

G MP3 FOLDER

During playback of a MP3 disc, use these buttons to select a folder in the disc.

H PROGRAM

Use this button to programme tracks.

I REPEAT

Use this button for repeat playback.

J SHUFFLE

Use this button for shuffle playback.

K Display

L Remote Sensor

When operating the remote control unit, point it towards here.

M PHONES

For private listening, insert the headphones plug into this jack, and adjust the volume by turning the LEVEL knob.

a Numeric buttons

Use these buttons to select tracks.

b ESP/MP3

During playback of a MP3 disc, use this button to search track name.

During playback of CD, use this button to switch the ESP function on or off.

 
c INTRO CHECK

Use this button to start the Intro Check.


Note:

To simplify explanations, instructions in this manual refer to the names of the buttons and controls on the front panel only. Associated controls on the remote control will also operate similarly.

REMOTE CONTROL RC1044

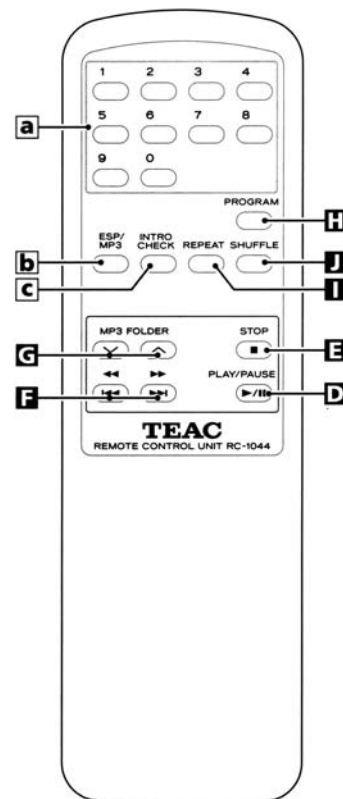

Rear Panel View

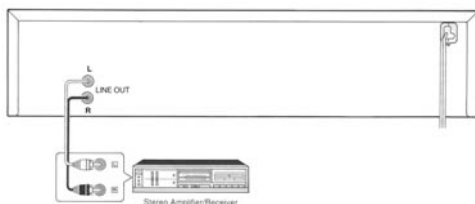 

pasosound
professional audio & sound

since 1931

PASO SOUND PRODUCTS, INC.

4750F GOER DRIVE

CHARLESTON, SOUTH CAROLINA 29406-6511 USA

Phone: 843 308 9005 - Fax: 843 308 0904

EMAIL: info@pasosound.com - URL: www.pasosound.com

FORM NT 248A RV 1.0

Printed in USA

AUTHORIZED DISTRIBUTOR

